

1U MD INSTALLATION GUIDE

# MD Chassis

MD PANEL 1U

# Table of Contents


Body Installation	
Rear Cabling	6
Front Cabling	8







### 1. Body Installation


1.1: Install 3 cage nuts in each side of the mounting profiles.

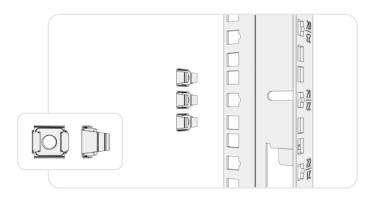

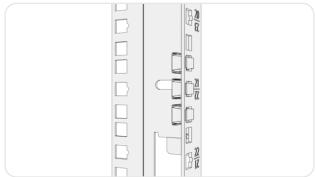



1.2: Install the bottom cage screw each side.

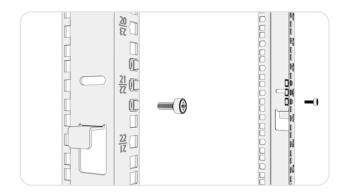

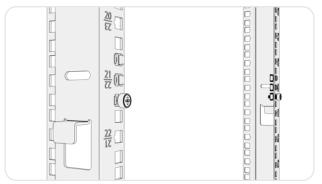


1.3: Mount the panel onto the bottom screw allowing the panel to rest on them.

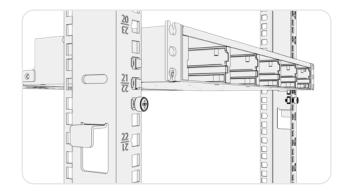


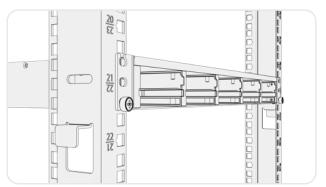




1.4: Install the remaining top 2 screws leaving the central cage nut empty.

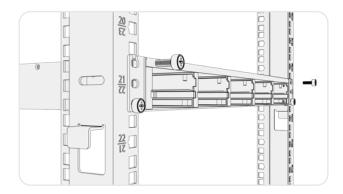


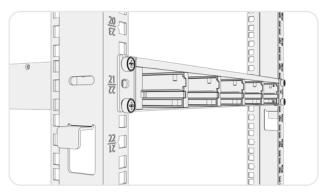


1.5: Tighten all screws ensuring the panel is level and within the designated U space.

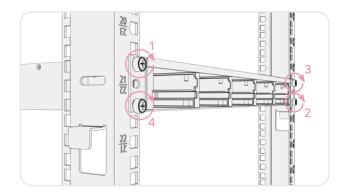


1.6: Install the front management panel using the central cage nut point.

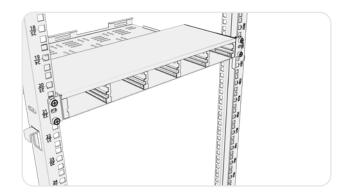


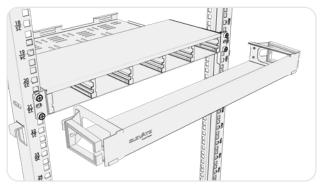





4

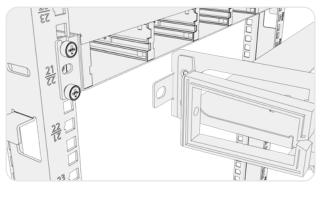


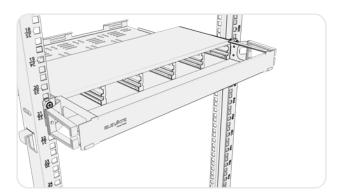


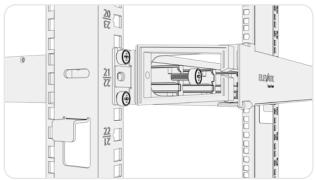


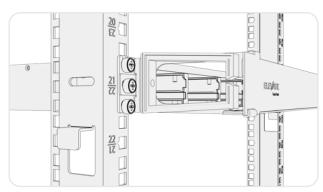


#### 1.7: Install desired cassettes.

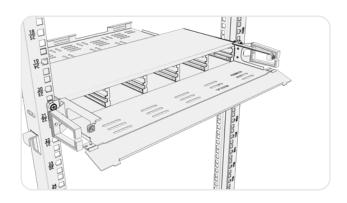

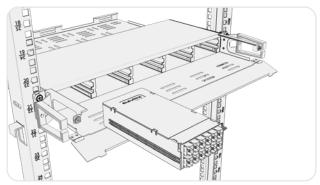

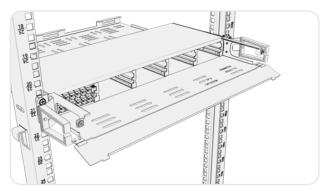


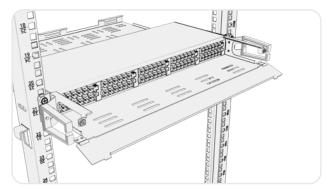




## 2. Rear Cabling


2.1: Clean all end faces of the MPO Connections on the incoming Trunk cable profiles with lint free dry clean cloth.

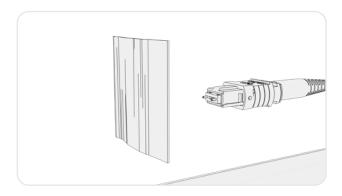

2.2: Clean all end faces on the Cassette MPO connections.

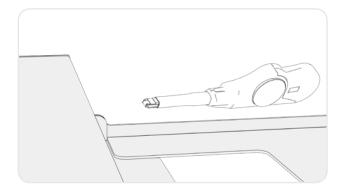


2.3: Insert all MPO to the back of the cassettes.

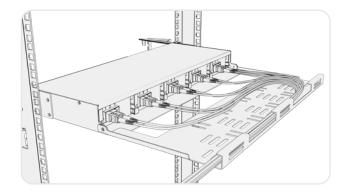





2.4: Dress the tails of the trunk cable in a swan neck shape this allows slack to remove the cassettes when needed (600mm tails are recommended).

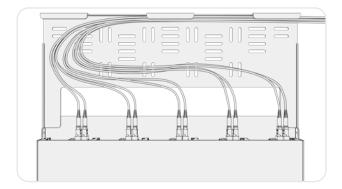



2.5: Fix the main jacket of the cable to the rear of the tray using cable ties. (If fixing only tails to the tray then Velcro type ties are recommended.)

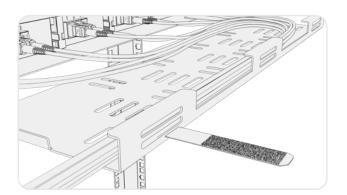


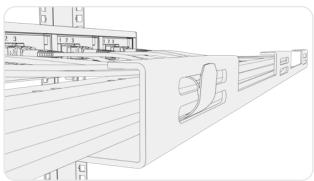





# 3. Front Cabling

3.1: Clean all end faces of the patch cords with lint free dry clean cloth.

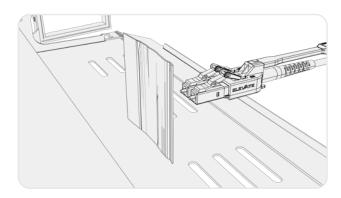


3.2: Clean all end faces of the cassettes and plug in all connectors.

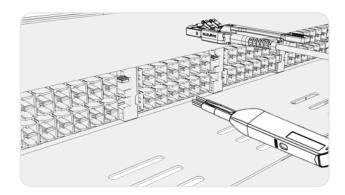

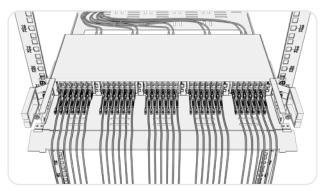



- 3.3: It is recommended to split the cabling 50% left and 50% right at the front of the cassettes.
- 3.4: It is recommended to place Velcro ties around each bunch of cables associated with a single cassette to allow easier access to individual cassettes.

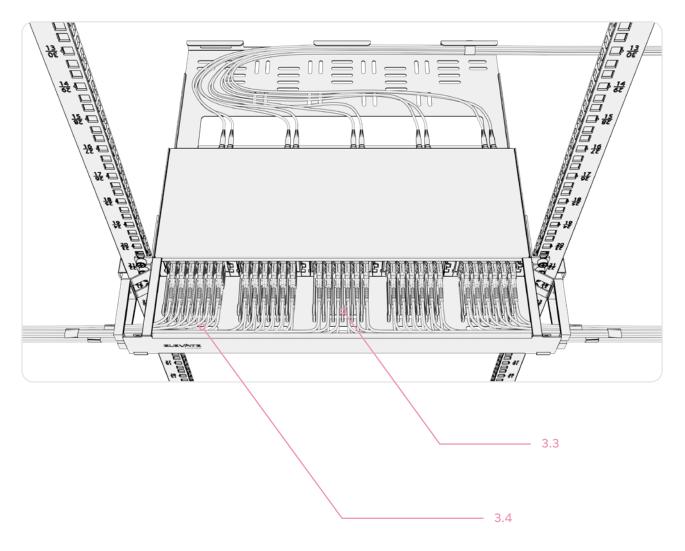





elevate@excel-networking.com
elevate.excel-networking.com

